


CURTAIN MEASURING GUIDE

How to measure for curtains.

Made-to-measure, without the guesswork.

USE ONE UNIT THROUGHOUT

Record every measurement in inches or millimeters.
Do not mix units on one window.

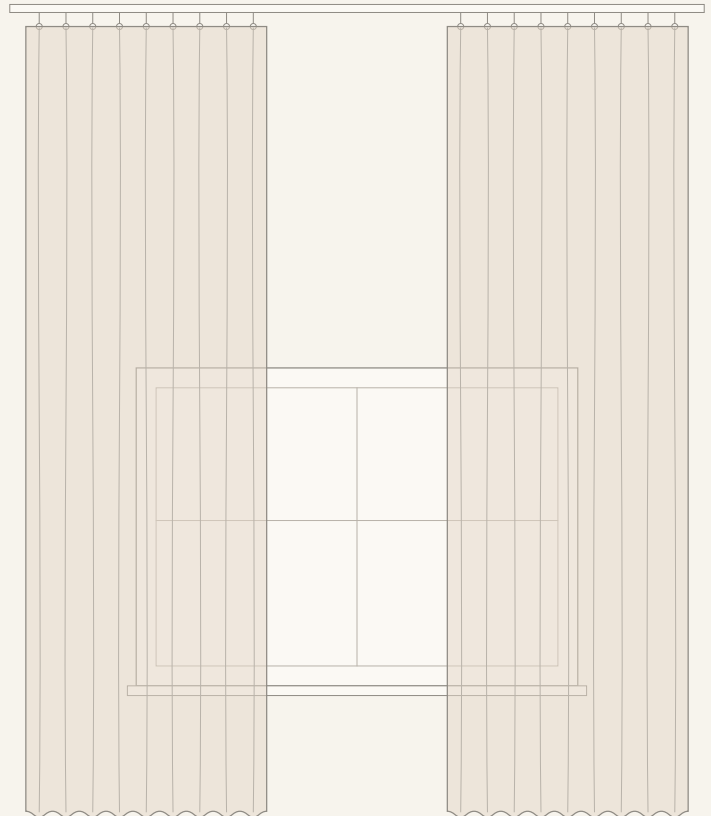

Prepare once. Record each window separately.

A clear mounting decision and a consistent measuring method prevent most ordering errors.

01

Use a rigid tape

Keep the tape straight and level.
Write each result down immediately.

02

Choose one unit

Use inches or millimeters throughout one window. Never mix the two.

03

Label the opening

Record the room and window name, then keep one full-window photo.

Have these ready

- Rigid metal tape measure, pencil, removable tape, and a level.
- A separate record for every room and window.
- A full-window photo and close-up of the planned mounting surface.
- The product order screen so you can match its requested width and length fields.

ACCURACY BEFORE COMPLETENESS

Do not add fullness, overlaps, offsets, or floor allowances unless VeloFold has supplied the value for your product.


01 / MOUNTING POSITION

Choose your mounting position

Decide whether the hardware will be fixed to the ceiling or to the wall before taking width or length.


Ceiling-mounted track

The small point marks measurement B's actual starting point beneath the track carrier.

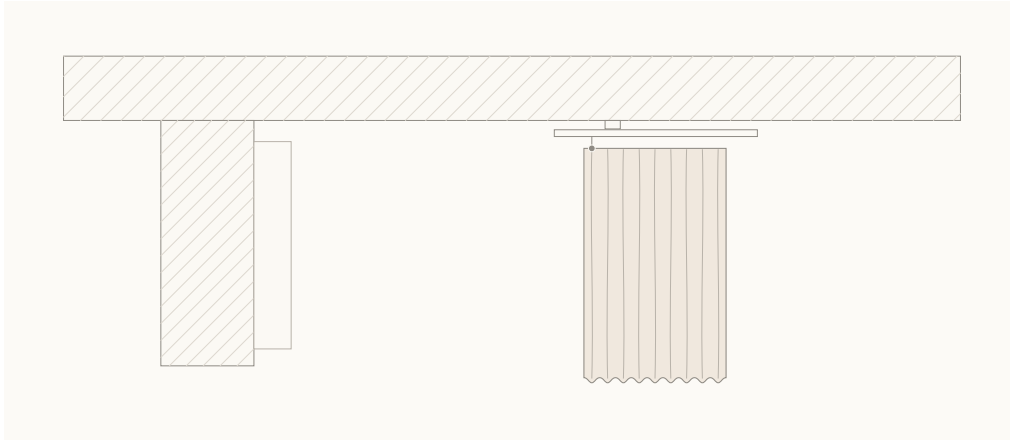

Wall-mounted track or rod

Measure from the curtain hook or ring hanging point, not from the bracket or wall fixing.

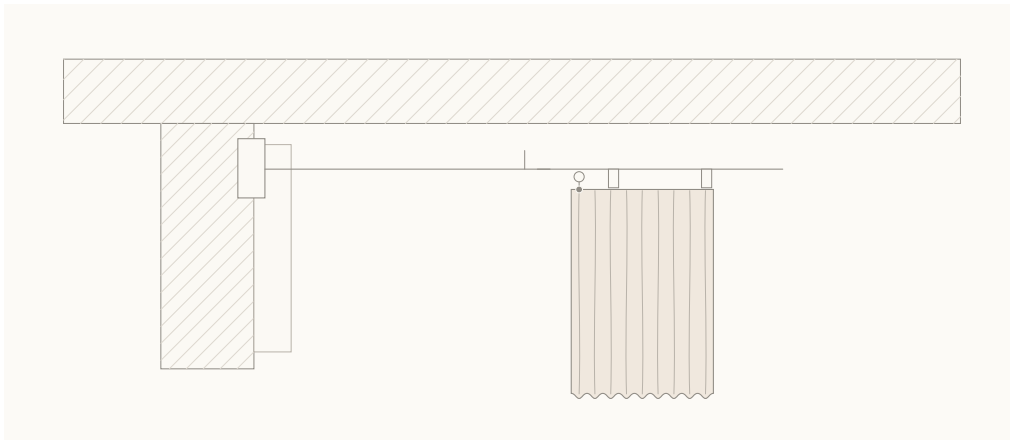


POSITION IS DIAGRAMMATIC

Mounting offset, projection, and fixing dimensions: [CONFIRM WITH VELOFOLD]

Measure your finished width

Measure the full finished span from the left usable hardware endpoint to the right usable hardware endpoint.

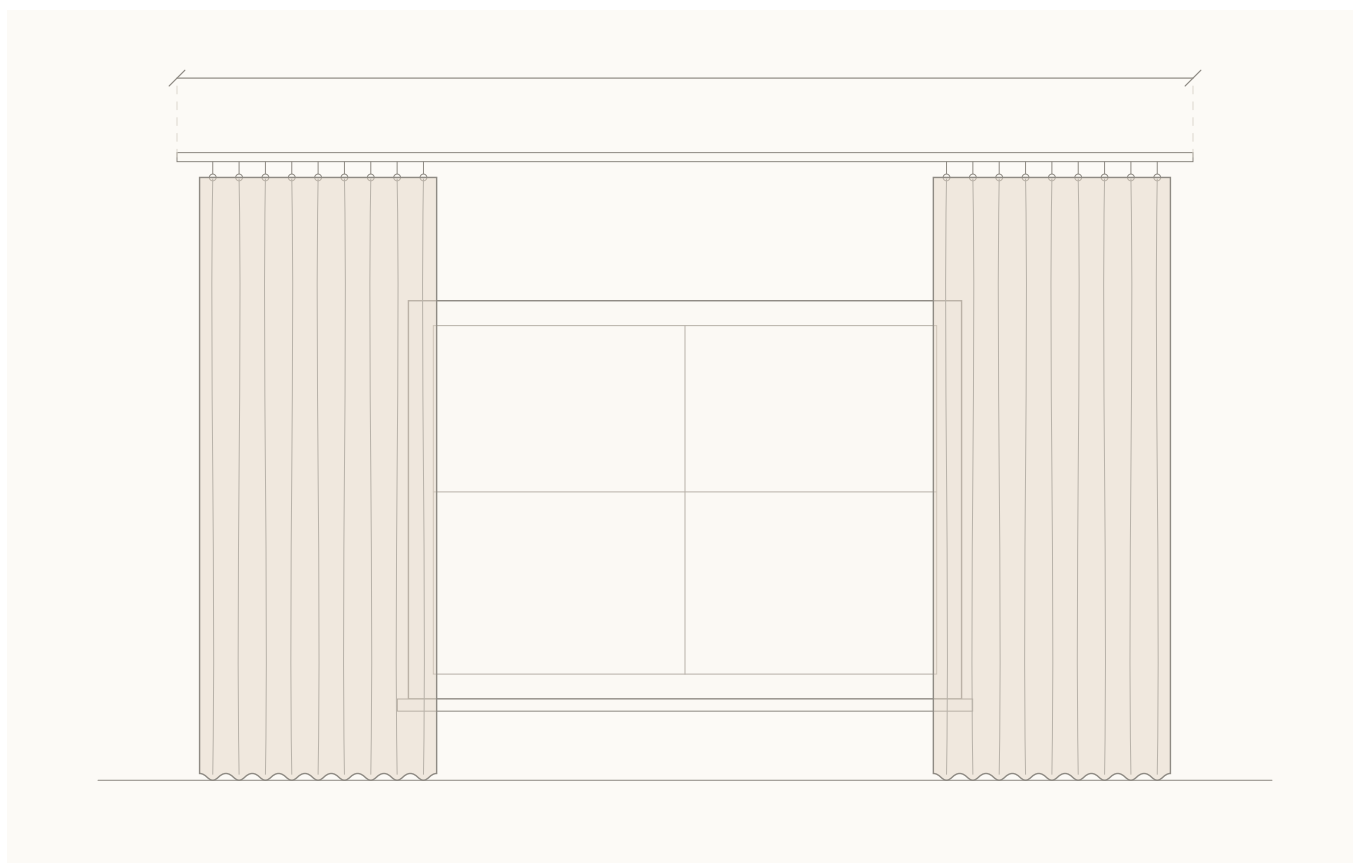


- START: the left usable end of the track or rod.
- END: the right usable end of the track or rod.
- For a decorative rod, exclude the finials. For a track, measure end to end.

RECORD MEASUREMENT A

A is the finished hardware span. Do not add fullness or an overlap allowance unless the product instructions specifically require it.

Plan the finished span

Choose the hardware span before measuring A so the open curtains can clear the window as intended.

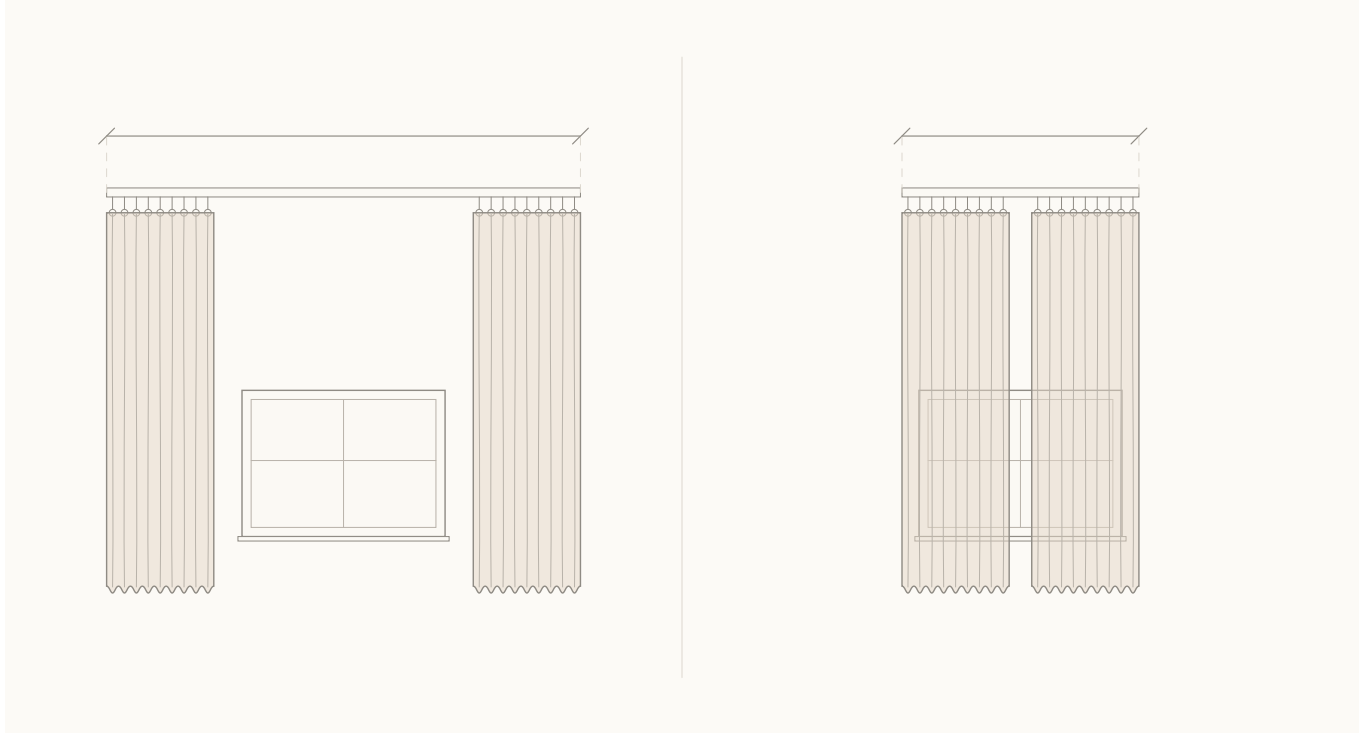

Do: plan for the open curtains

Choose a finished span that provides the intended stacking space beside the opening.

Don't: measure the opening alone


Do not assume the window-frame width is the required finished hardware width.

CONFIRM THE REQUIRED EXTENSION

Required track or rod extension beyond the opening: [CONFIRM WITH VELOFOLD]

Choose your panel type

For smaller finished widths, VeloFold generally recommends a single panel. Wider spans are better suited to a double-panel pair.

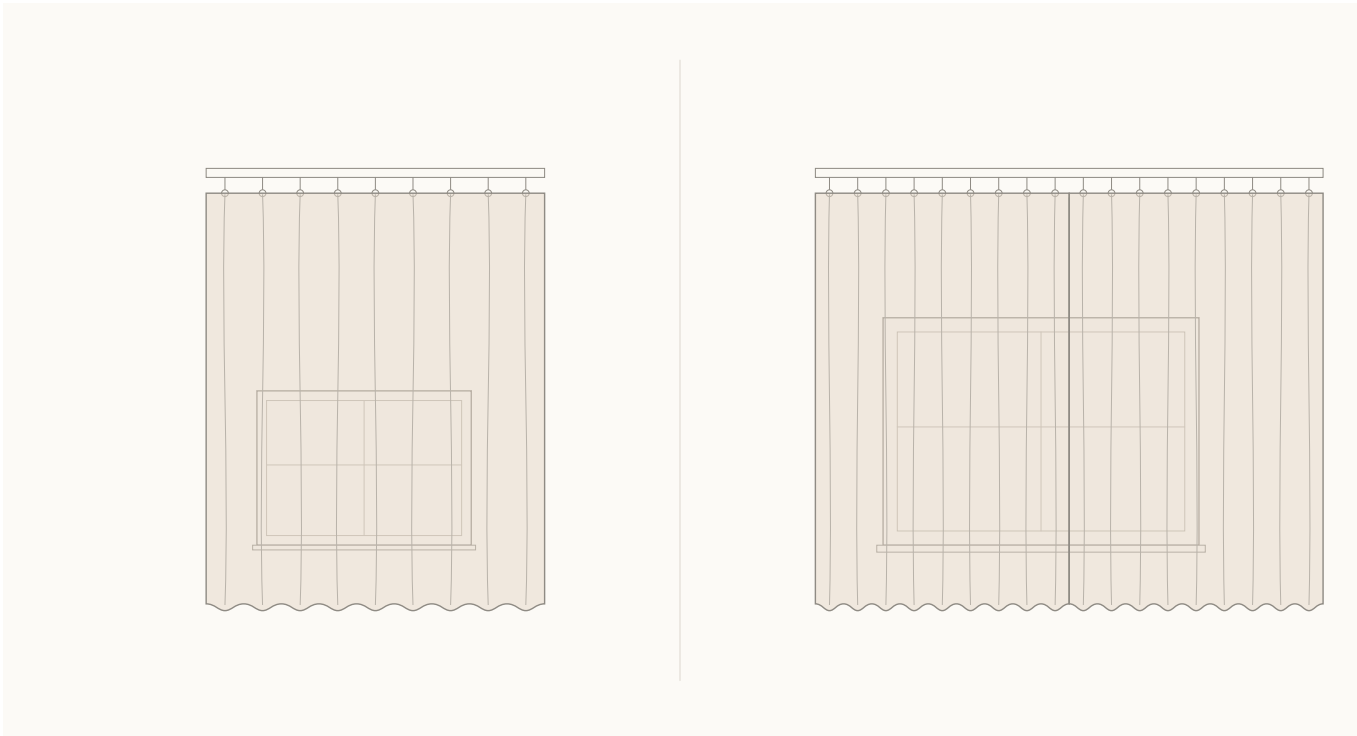

Single panel

Recommended for smaller finished widths. One continuous curtain draws to one side.

Double panel


Recommended for wider finished widths. Two panels meet at the center and draw to opposite sides.

CONFIRM THE WIDTH THRESHOLD

Single-versus-double panel cutoff: [CONFIRM WITH VELOFOLD]


Measure your finished length

Choose the intended hem position first. Then measure B from the actual hanging point to that exact finish.

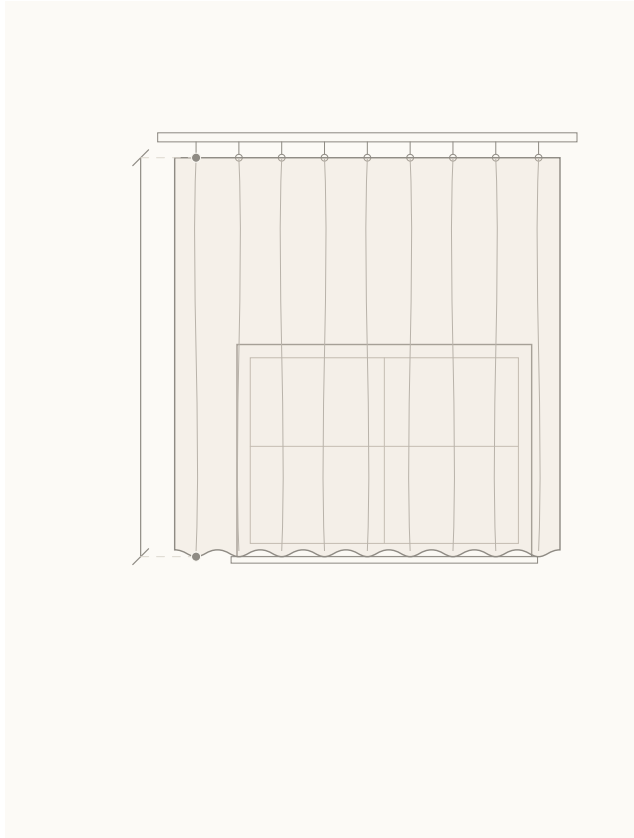

Sill finish

End B at the exact intended hem position relative to the sill.

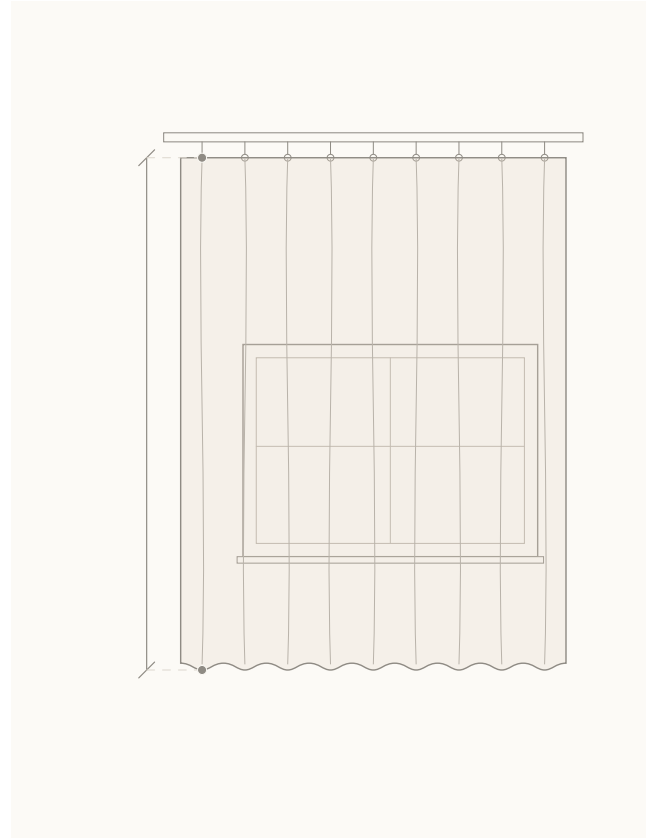

Below-sill or custom finish


End B at the chosen point below the sill or at another deliberate finish.

DO NOT ASSUME A SILL OFFSET

Any distance above or below the sill: [CONFIRM WITH VELOFOLD]

Choose your floor finish

Use the same hanging point and choose the intended relationship between the hem and the finished floor.

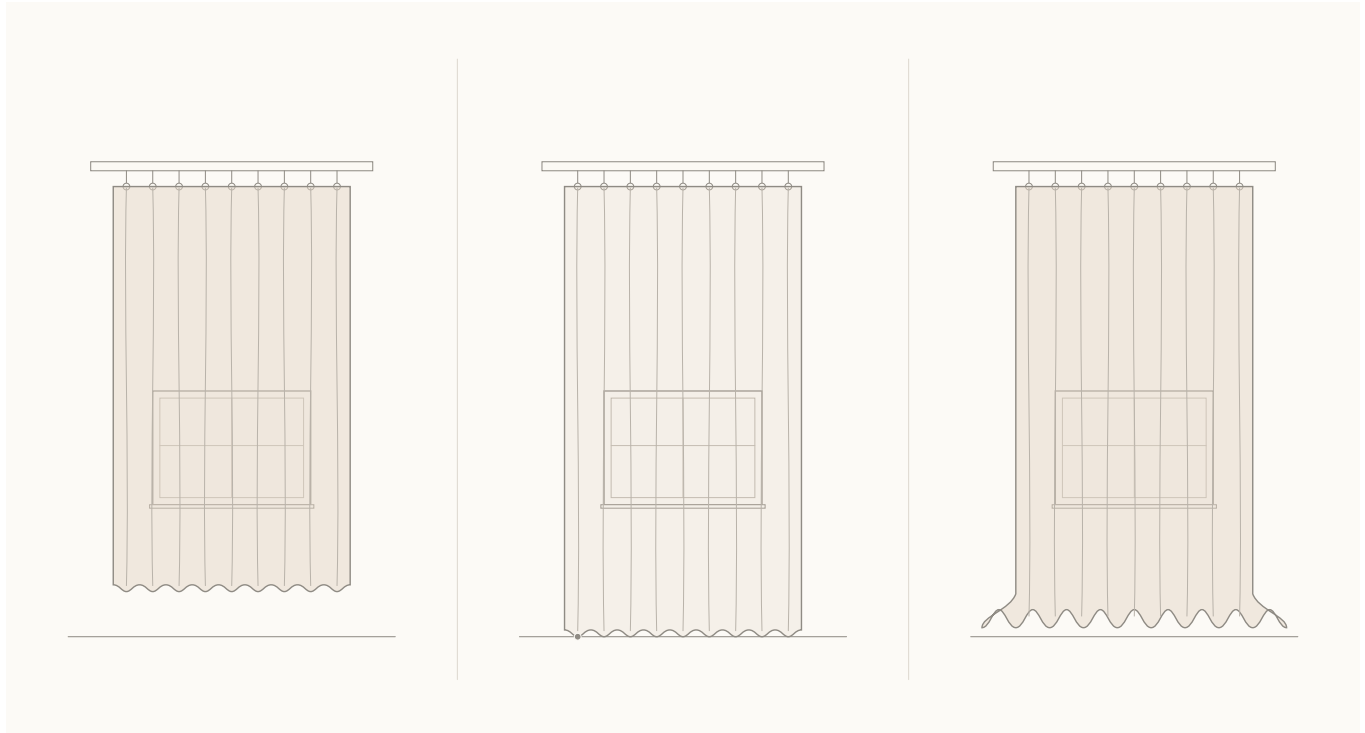

Hover

The hem stops just above the finished floor for a crisp, practical finish. Floor gap: [CONFIRM WITH VELOFOLD].

Kiss the Floor

The lowest point of the hem meets the finished floor for a tailored look, without extra fabric resting on it.

Puddle


Extra fabric rests on the floor for a soft, relaxed finish. Added length: [CONFIRM WITH VELOFOLD].

CHOOSE BEFORE MEASURING B

Record the selected floor finish with measurement B.

Review your measurements

Record one final width and length for this window, then complete the short check before ordering.

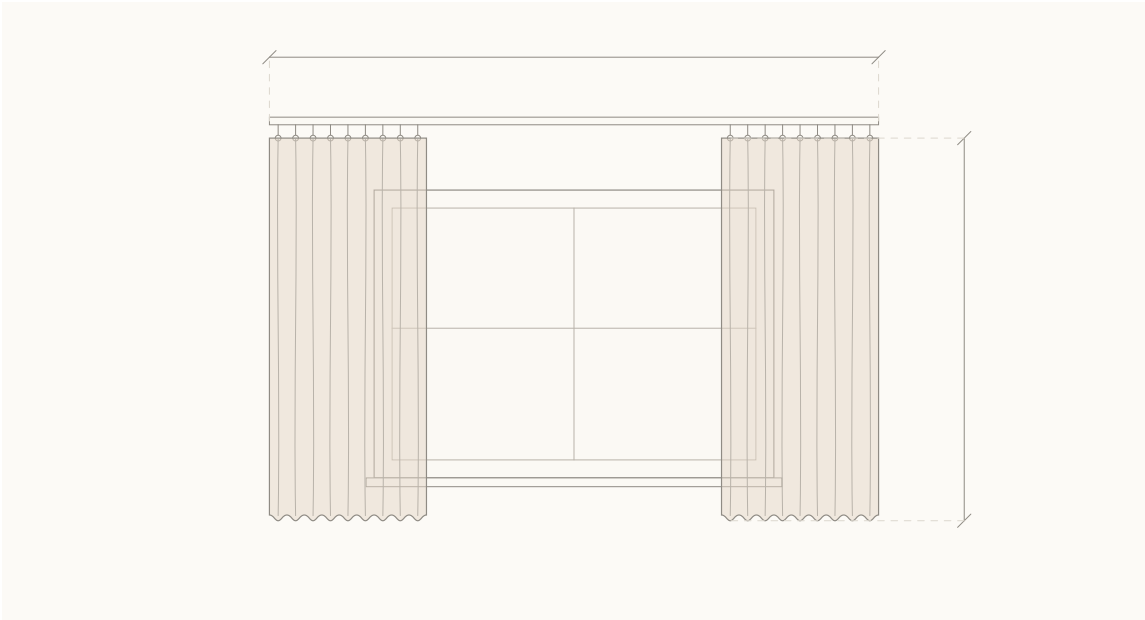

A FINISHED WIDTH

UNITS ☐ in ☐ mm

B FINISHED LENGTH

MOUNT ☐ Ceiling ☐ Wall

Final check

- ☐ Mounting position chosen
- ☐ Length endpoint confirmed
- ☐ Window labeled and photographed
- ☐ Width measured twice
- ☐ Panel type confirmed
- ☐ Floor finish selected